


How to install Linkly for Ingenico Integrated Pinpads

1. Navigate to this URL: "<https://linkly.com.au/resources-support/software/>". Download the linkly install client.

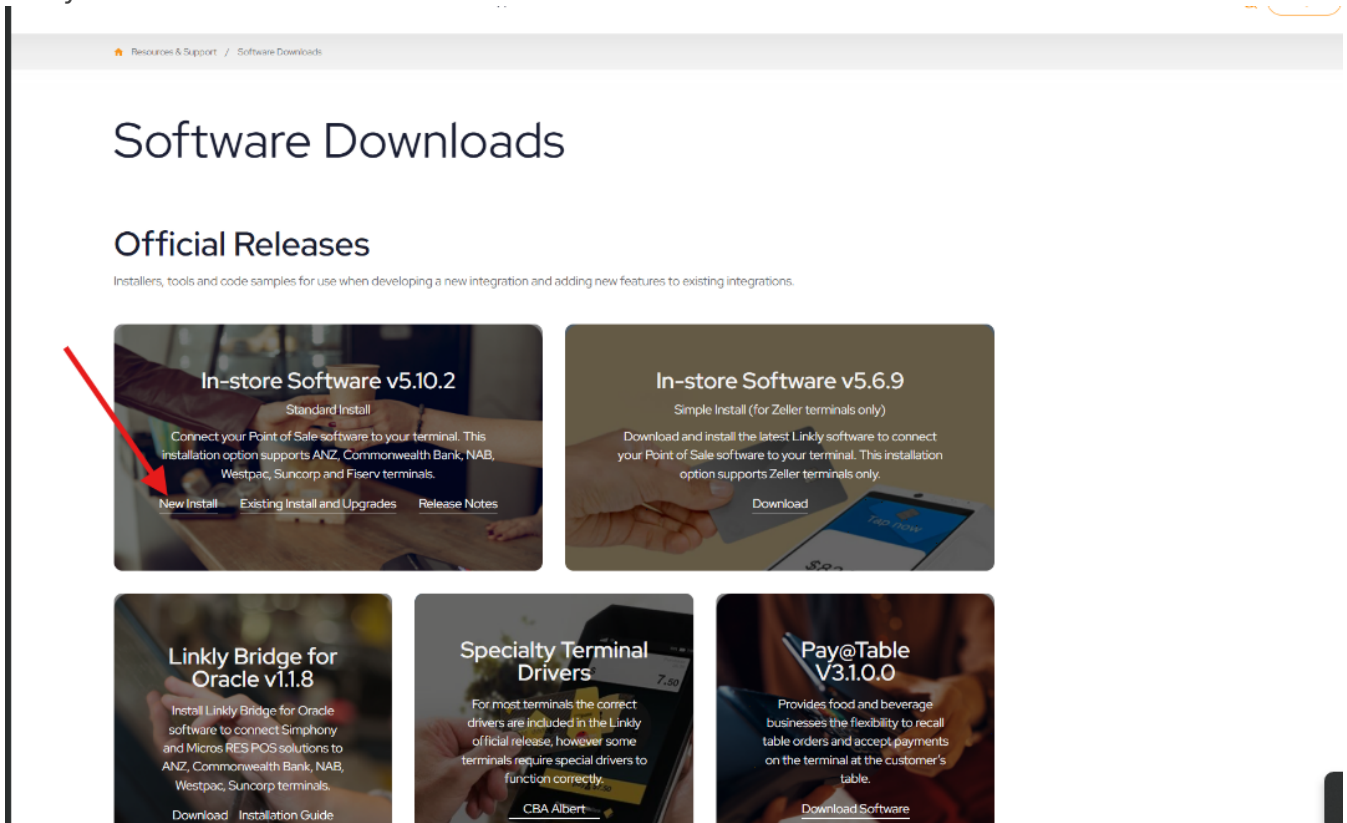

2. Once downloaded open it and follow the configuration wizard prompts.

Welcome to the Linkly Setup Wizard

This will install Linkly version 5.10.2 on your computer.

You should close your POS software application before continuing.


Click Next to continue, or Cancel to exit Setup.



Next >


Cancel

3. If installing to an ingenico machine, uncheck the "Install Verifone USB Drivers" option. If installing a verifone machine, uncheck the "Install Ingenico USB Drivers" option.

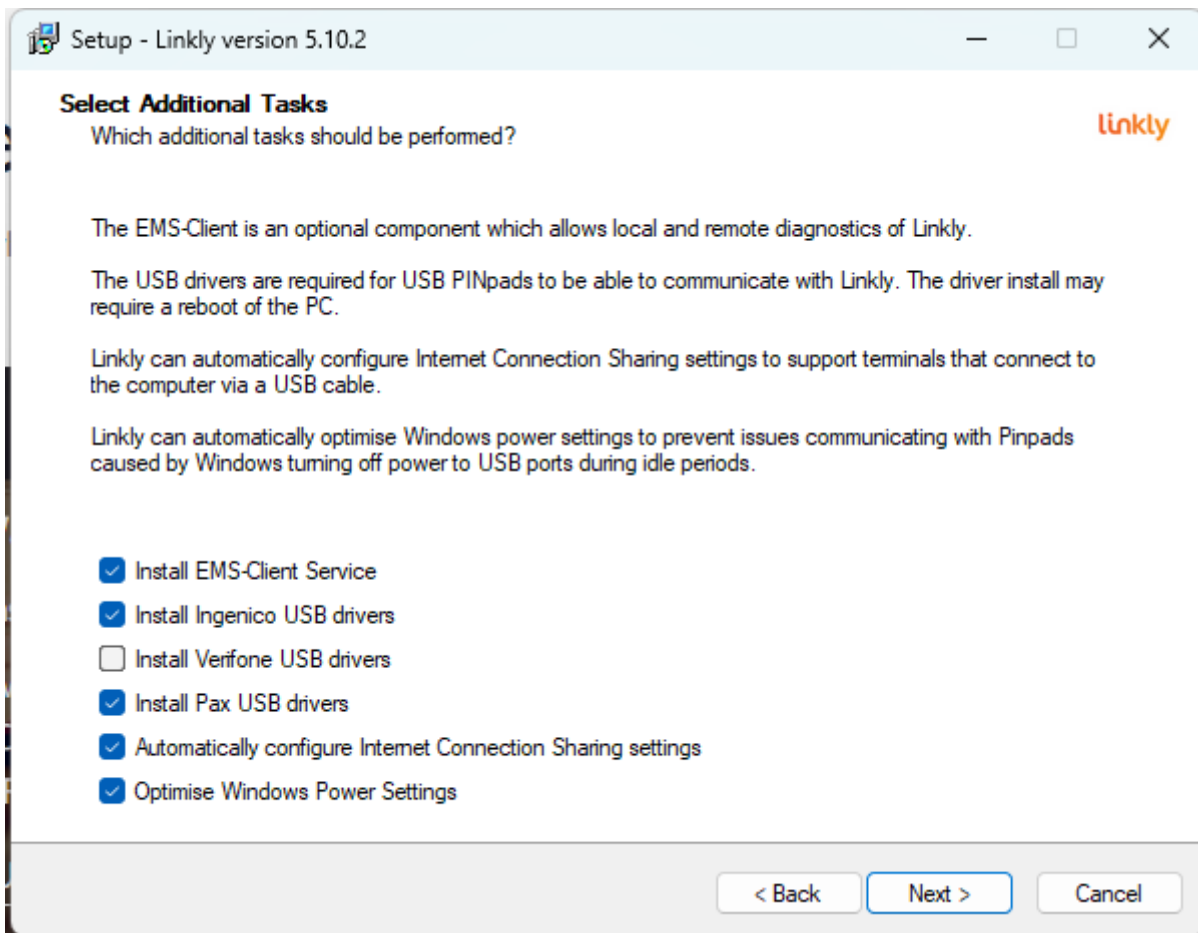

Ingenico Machines

4. The linkly config wiz will appear. Click detect to find the com port number.

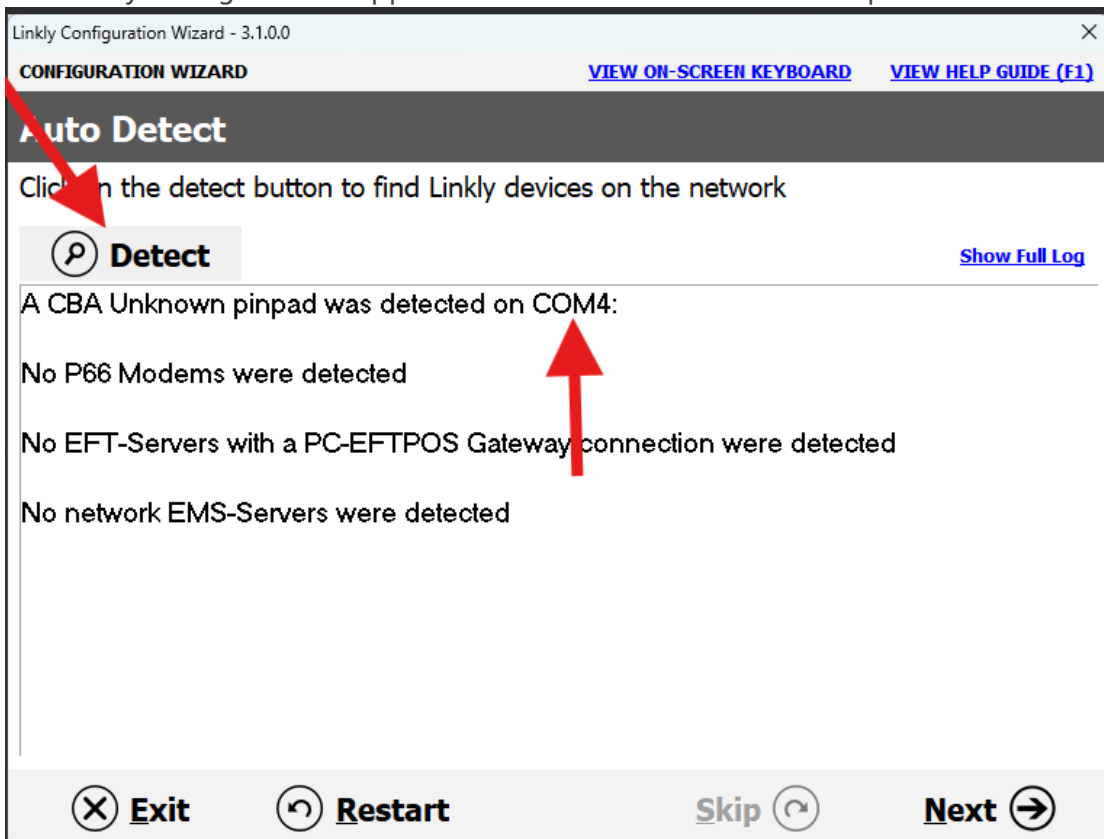

5. Click next, then choose the bank CBA.

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)

Select Your Bank

Select your bank from the list below

- ANZ
- Bankwest
- Bendigo
- CBA
- First Data Merchant Solutions
- NAB
- St George
- Suncorp
- Touch
- Westpac

Exit **Restart** **Skip** **Next**

6. Click next, the pin pad port should match the port that was detected earlier.

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)

Setting Up EFT-Client

Edit EFT-Client settings and click on next to continue

Pinpad port: COM4

Pinpad modem/printer configuration

- ☒ I want the to use the pinpad's internal modem/GPRS as my fallback link to the bank.
- ☐ I want to use the pinpad's internal printer as my EFTPOS printer.
- ☐ I want to use the pinpad's internal modem/GPRS as my primary link to the bank.

☐ View advanced settings...

Exit **Restart** **Skip** **Next**

7. Click next.

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)





Setting Up EMS-Client

Edit EMS-Client settings and click on next to continue

EMS Server IP:  

The EMS-Server is optional, and is not required for Linkly to function correctly.
Enter your EMS-Server IP or click on skip to move to the next step.

☐ View advanced settings...

 **Exit**  **Restart** **Skip**  **Next** 

8. Click "Another PC on the network".

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)

Setting up EFT-Server


Select your server connection type





To the bank via another PC

Another PC on the network

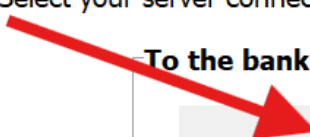To the bank directly from this PC

Linkly IP Gateway



 **Exit**  **Restart** **Skip**  **Next** 

9. Enter the POS servers IP address and click next.

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)

Setting up EFT-Server Connection

Enter the details for the selected connection

Priority 0 - Low

Line Name TCP/IP Line

Address 10.1.1.93

Port ☒ Use Default Port 2005

Exit **Restart** **Skip** **Next**

10. Checkbox "no, ive entered all connections".

Linkly Configuration Wizard - 3.1.0.0

CONFIGURATION WIZARD [VIEW ON-SCREEN KEYBOARD](#) [VIEW HELP GUIDE \(F1\)](#)

EFT-Server Line Configuration Complete

Select "no" to continue or "yes" to enter additional connections


Do you need to enter another EFT-Server connection?

☒ **No, I've entered all connections**


☐ **Yes, I need to enter another connection**

Exit **Restart** **Skip** **Next**


11. All thats left is to log the eftpos machine on. In the taskbar double click the "c" icon.

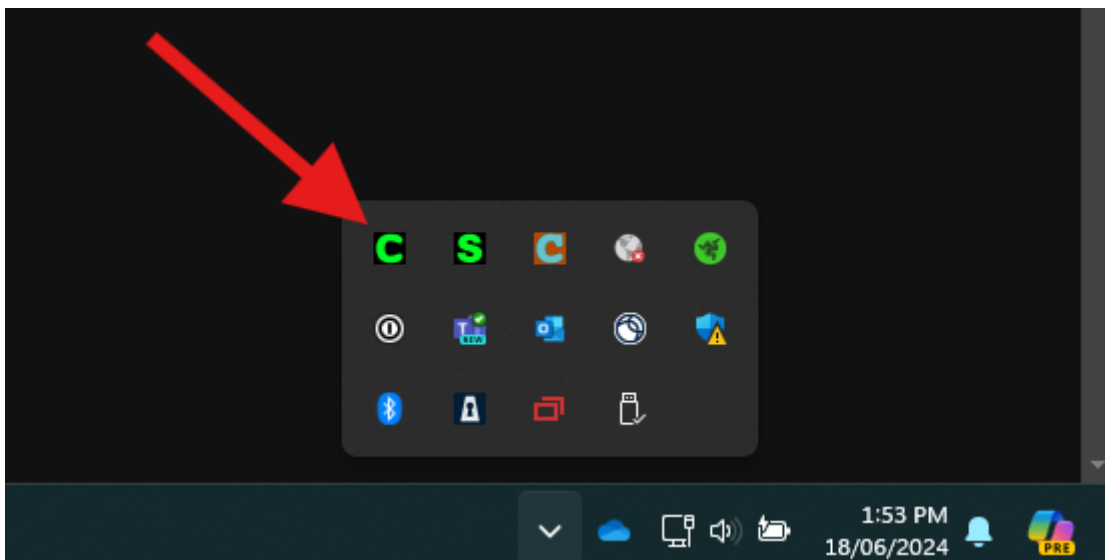

12. The linkly client gui will appear, click "ctrl panel".

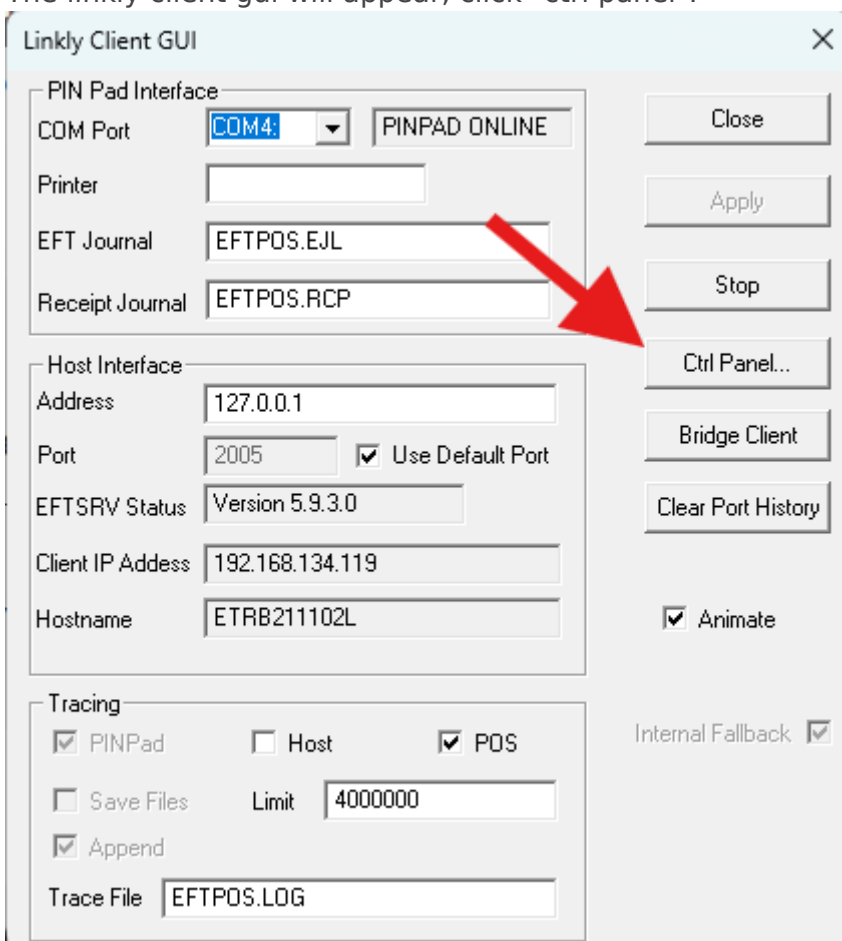

13. Click "logon". If successful it will say approved.

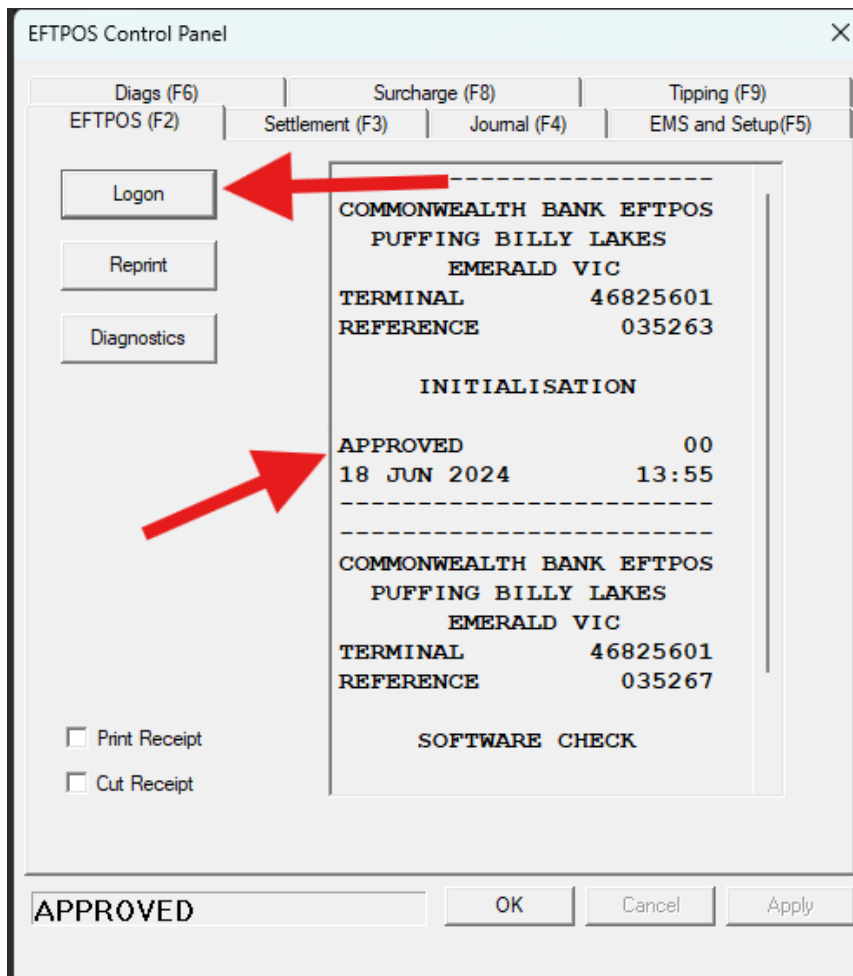

Verifone

1. Repeat up to step 3 and uncheck "Install Ingenico USB Drivers" and make sure "Install Verifone USB drivers" is checked.
2. There is a PDF that Verifone made called "P630 USB Install Guide" that shows how to install and setup the terminal: C:\Users*username*\Puffing Billy Railway Board\Puffing Billy Railway - IT Department\Documentation\EFTPOS

Revision #5

Created 18 June 2024 02:12:11 by Dylan Healey

Updated 18 June 2024 04:19:13 by Keegan Hunt