


# Emerald PA System (Training)

- [How to: Send a Pre-recorded Message \(Training\)](#)
- [How to: Live Page \(Training\)](#)


# How to: Send a Pre-recorded Message (Training)

Currently there is only 1 Audio Zone at Emerald Station. Due to this zone control for the announcement is not required.

1. Firstly you can choose to delay in the announcement with the "**select pre-message delay**" field.

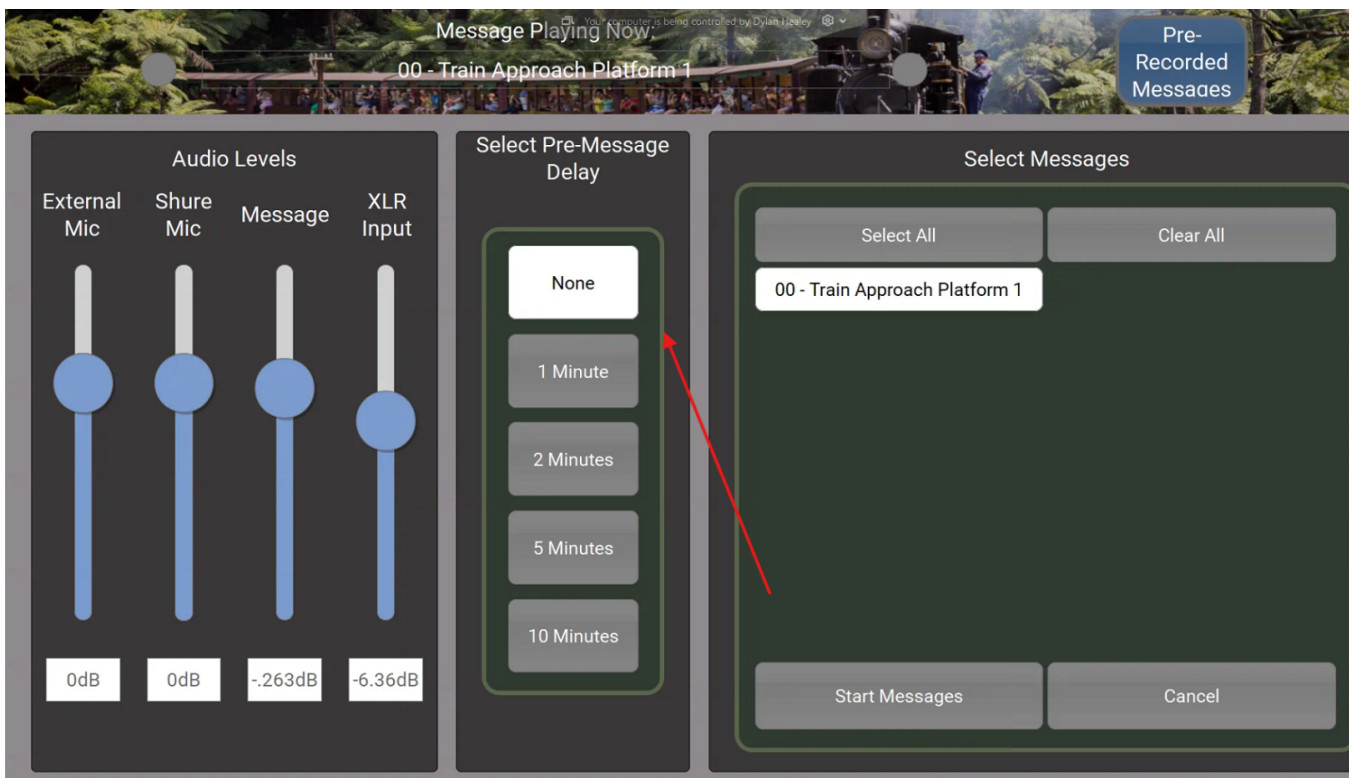

2. Select a message that you would like to broadcast in the "**Select Messages**" panel. Once the message is selected "**Start Messages**" is then selected to start the broadcast.

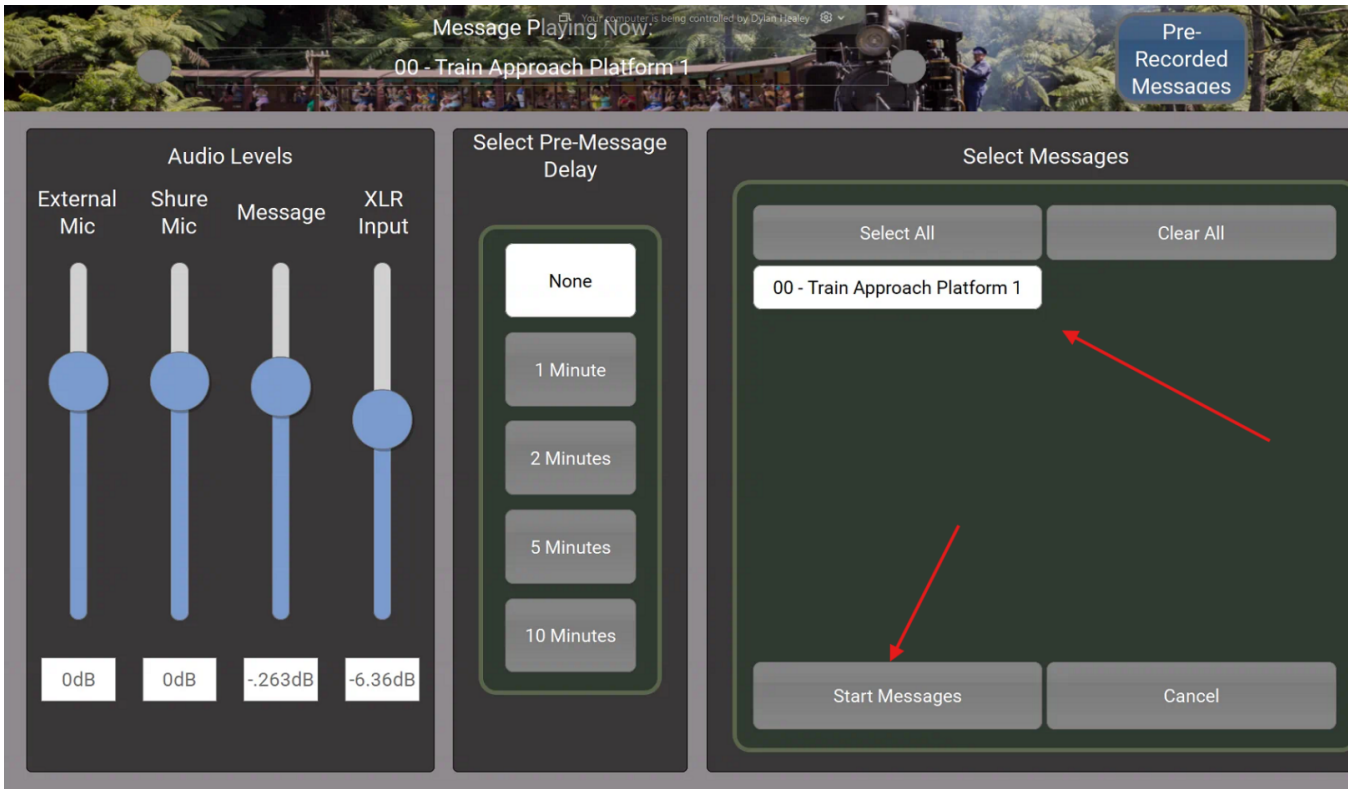

3. if you need to adjust the volume you can use the **Message** slider under **Audio Levels**



# How to: Live Page (Training)

## Live Paging

If no sound adjustment needs to be made please press and hold the button on the microphone and talk



1. If you need to change how loud the microphone is you can adjust it using the **External Mix** or **Shure Mic** slider



**External Mic** - The external microphone is located in the box outside of the safe working room.

**Shure Mic** - This microphone is located inside the safe working room

2. After any adjustment have been made if needed, you can then push and hold the button on the microphone to talk and speak into the microphone.